

33017 01151 4606



READ ME FIRST!

ENSURE you connect the Micro HDMI cable to the main port marked **HDMI0** (the port nearest to the USB-C power port).

ENSURE *Pi 4* compatible software is used if you re-program the microSD card with different software or use a different card. If you see a blank or a rainbow splash screen this may indicate you are NOT using *Pi 4* compatible software. *NOOBS 3.1.0* or later is required for operation. See:


www.canakit.com/pi

DO NOT insert the microSD card in the board until after the board has been fully assembled in the case.

WATCH the case installation video at **www.canakit.com/pi-case** . Note that the board must be installed on the flat base underneath the two notches.

DO NOT insert the microSD card in a USB Card Reader dongle connected to the board. The Raspberry Pi cannot boot from a USB Card Reader plugged into a USB port.

Problems? Contact us at help@canakit.com

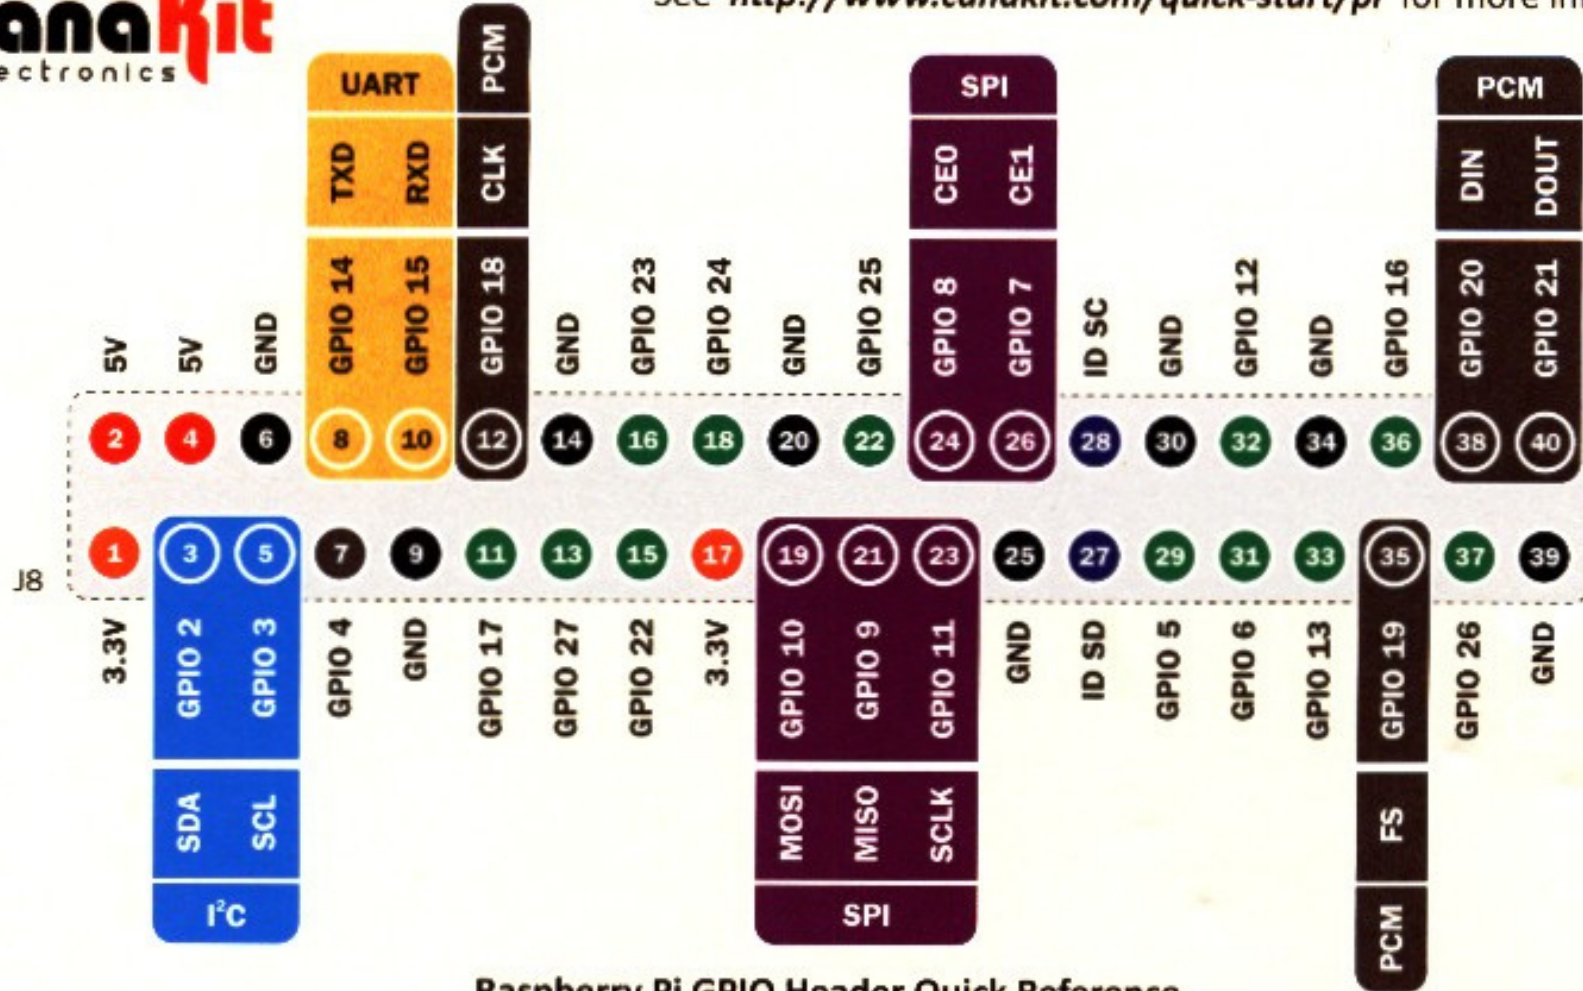

Raspberry Pi GPIO Header Quick Reference