 
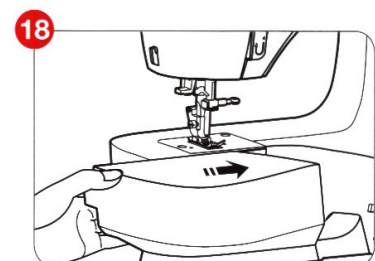 
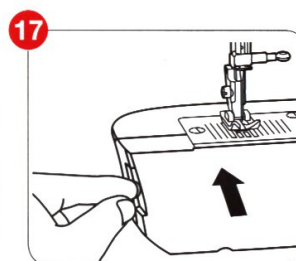 
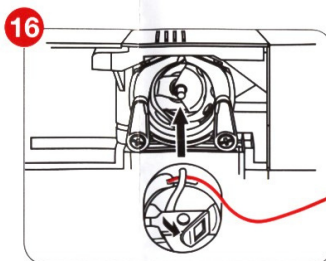 
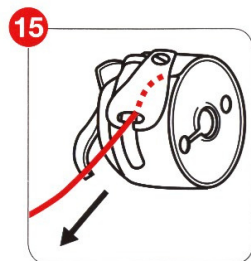 
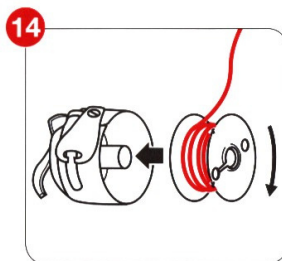 
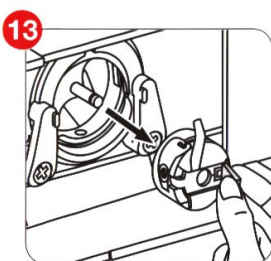 
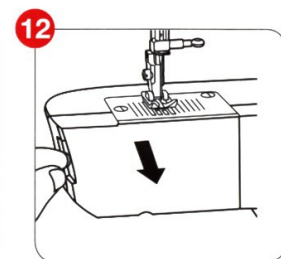 
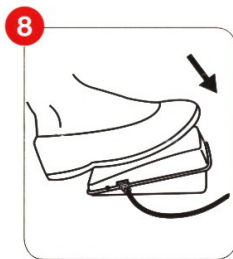 
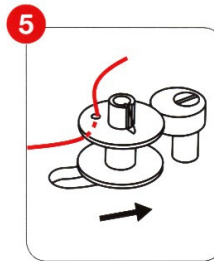 
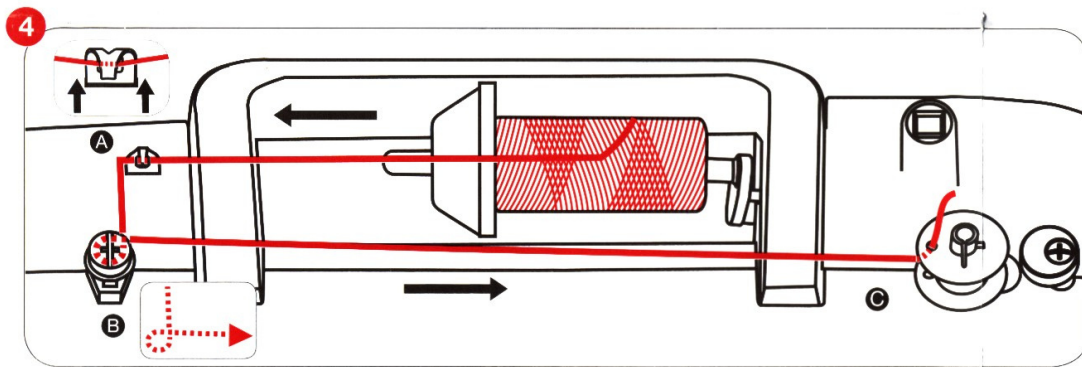 
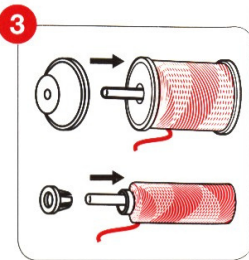 
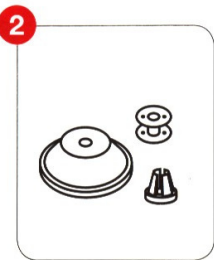 
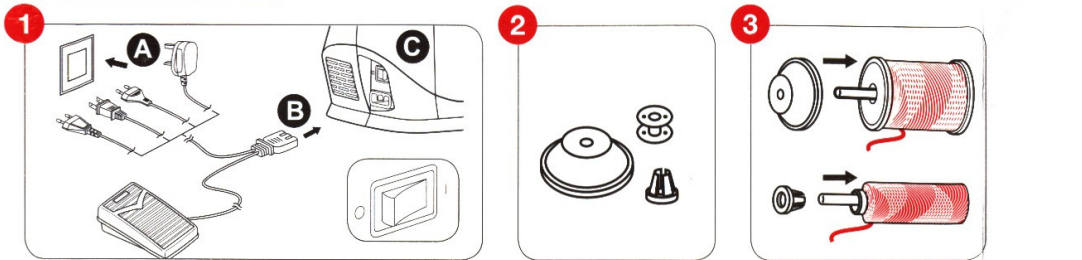 


# 1

 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
SINGER | www.singer.com

i singer.com/manuals

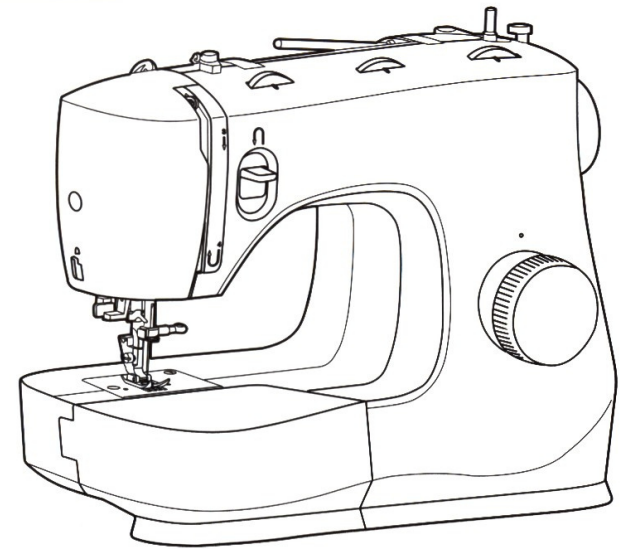

# 2



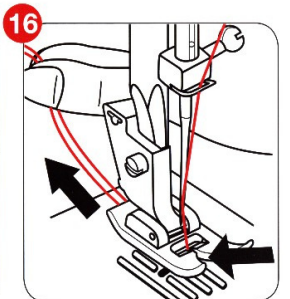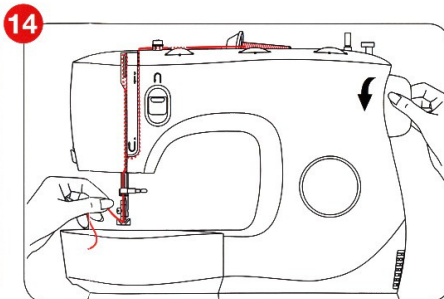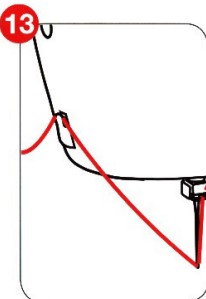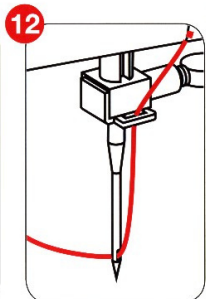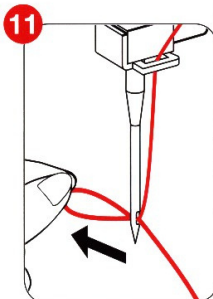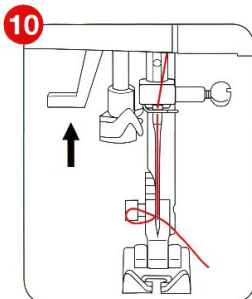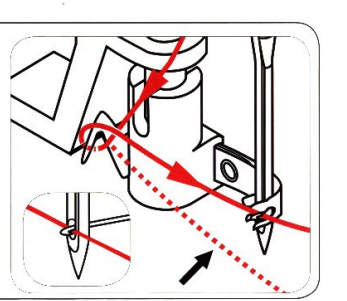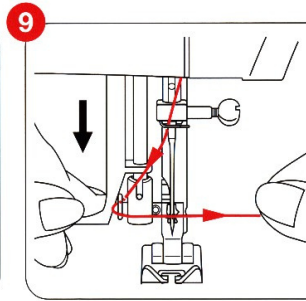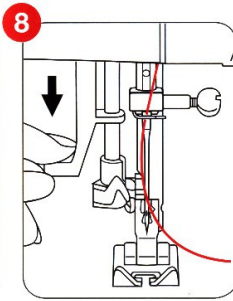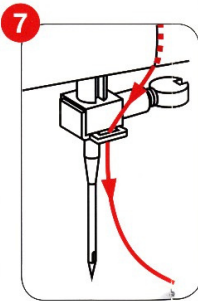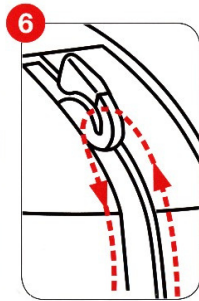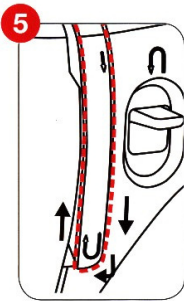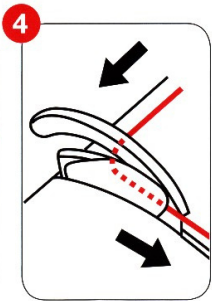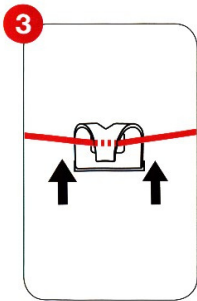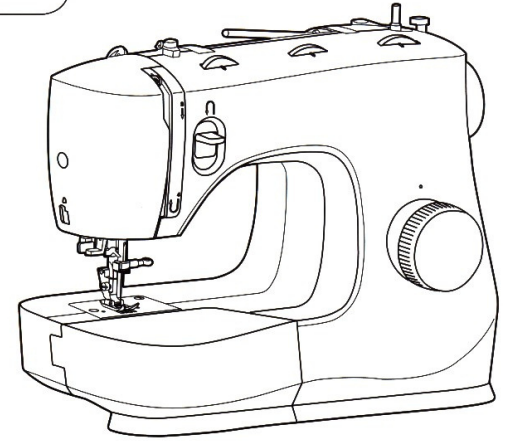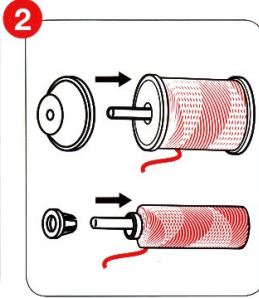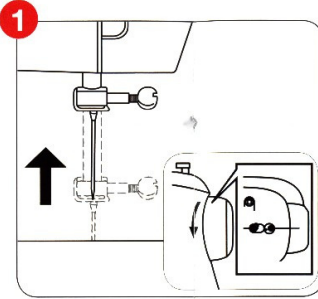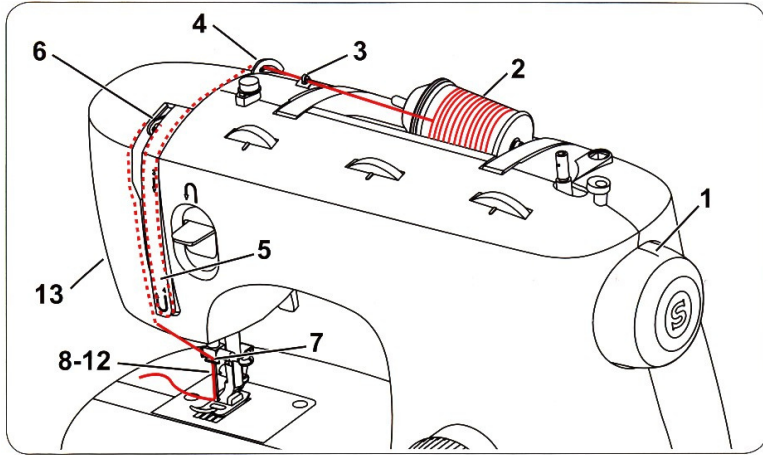

880124114 The Cameo™ S™ design are exclusive trademarks of The Singer Company Limited S.A.U. or its Affiliates.  
©2019 The Singer Company Limited S.A.U. or its Affiliates. All rights reserved.  
Este manual é um documento de propriedade intelectual da The Singer Company Limited S.A.U. ou suas Afiliadas.  
©2019 The Singer Company Limited S.A.U. or its Affiliates. Todos os direitos reservados.  
Le "S" du Cameo et Singer sont des marques exclusives de The Singer Company Limited S.A.U. ou de ses Affiliés.  
©2019 The Singer Company Limited S.A.U. ou ses sociétés affiliées. Tous droits réservés.